







# SCANDIA BLACK LUX NORDICA WHITE LUX






8-0 / 8-1 / 8-2 / 8-3

90x70x203 / 100x80x203 / 105x90x203 / 120x90x203  
DUSJKABINETT




Sort/HVIT, Klart/ Checker, U/ Dusjsett

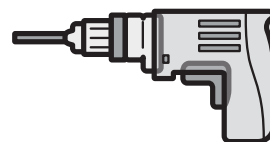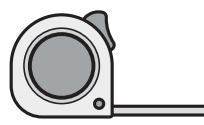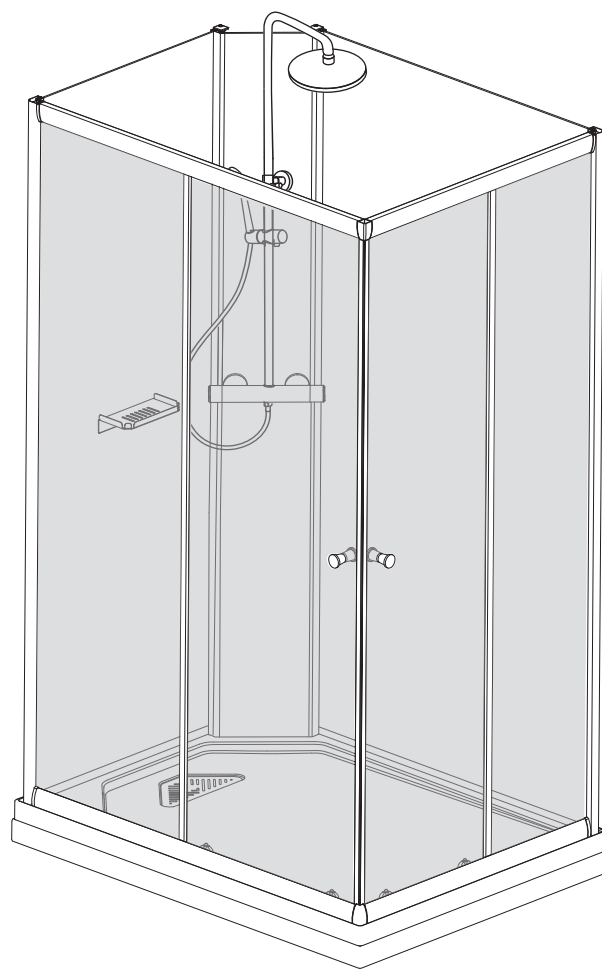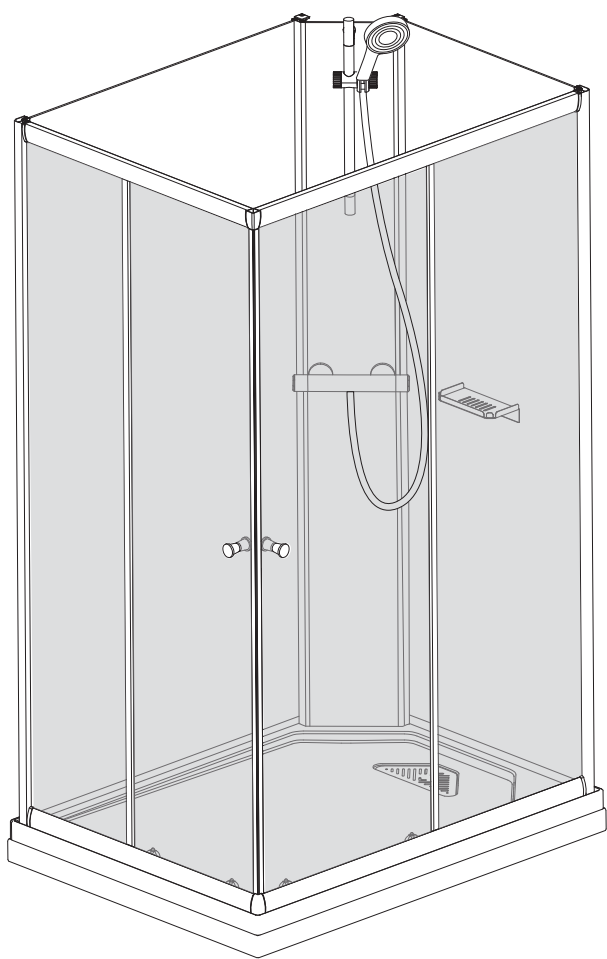


# Model 90x70

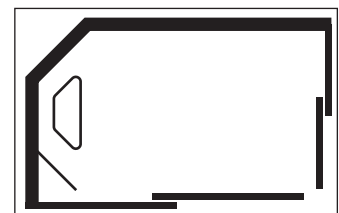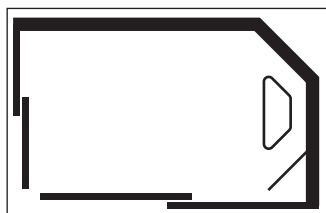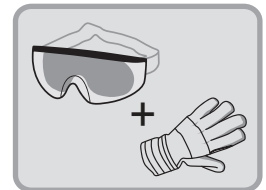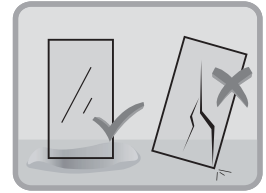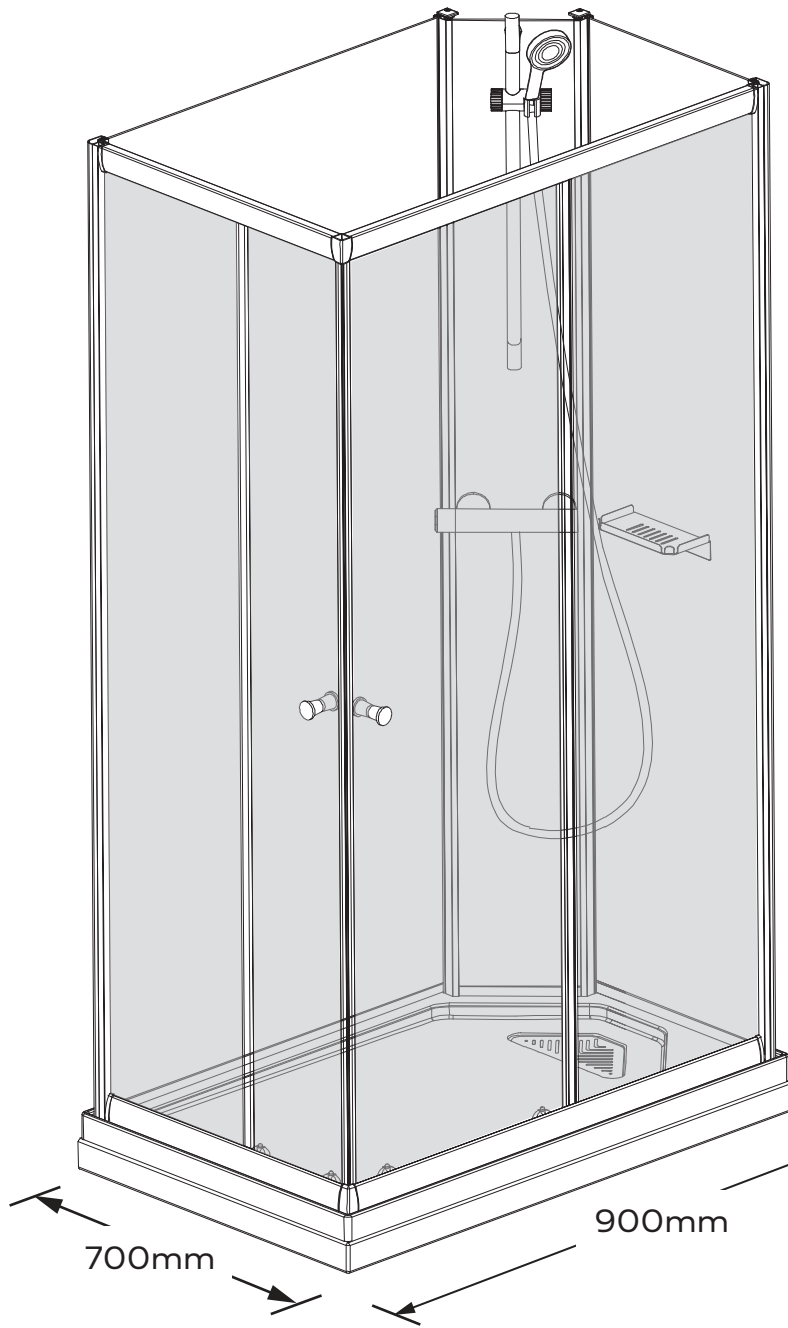


# Model 100x80

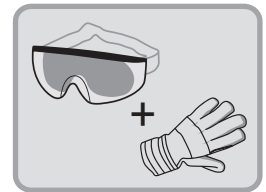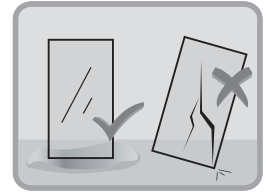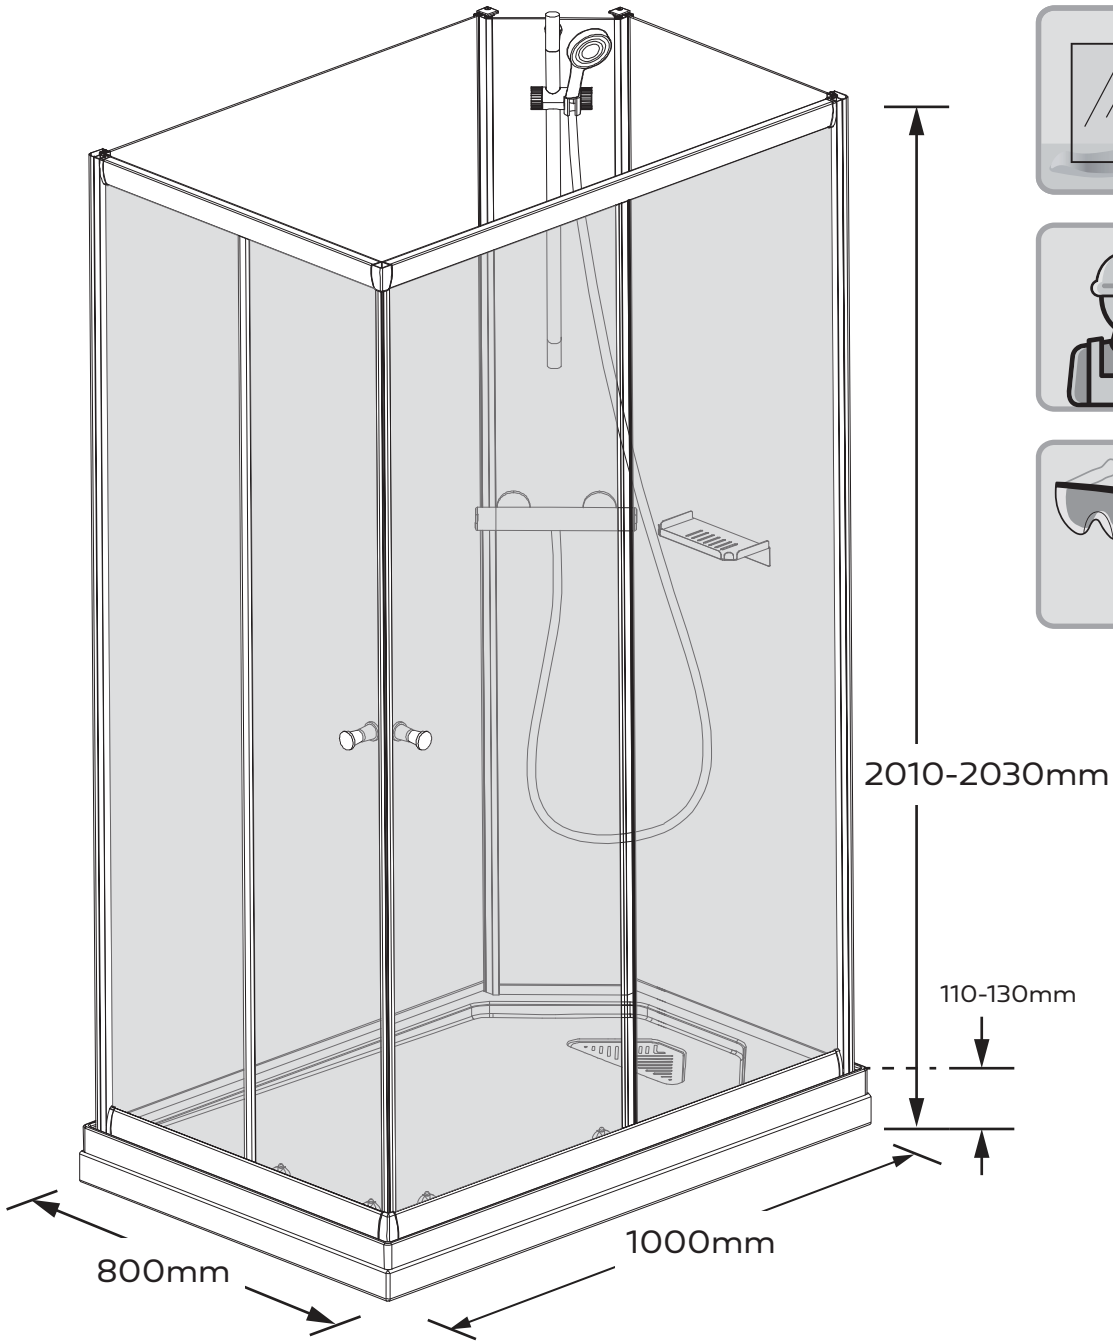




A

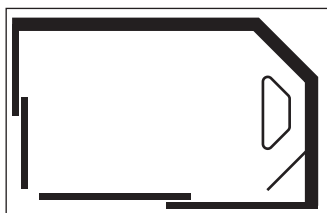


B

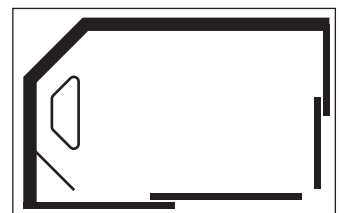


# Model 105x90

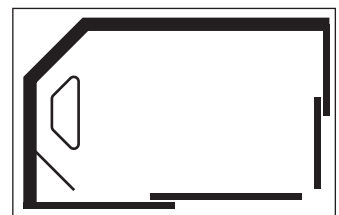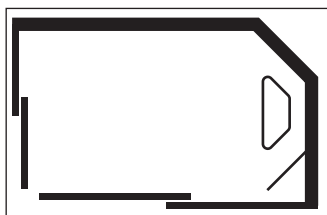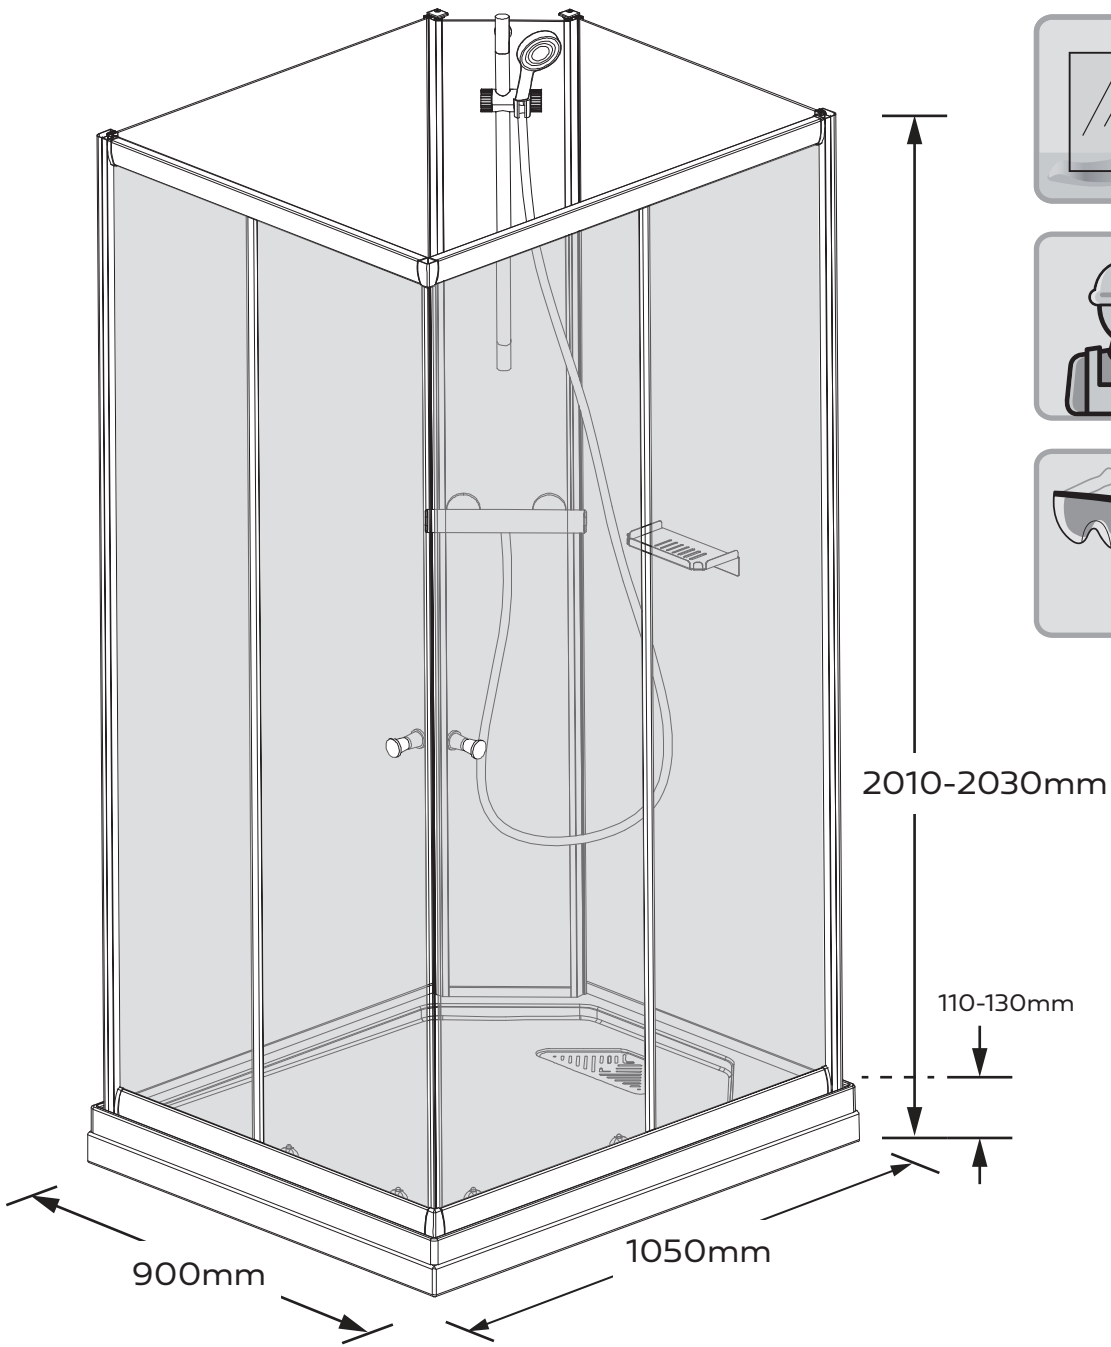


# Model 120x90

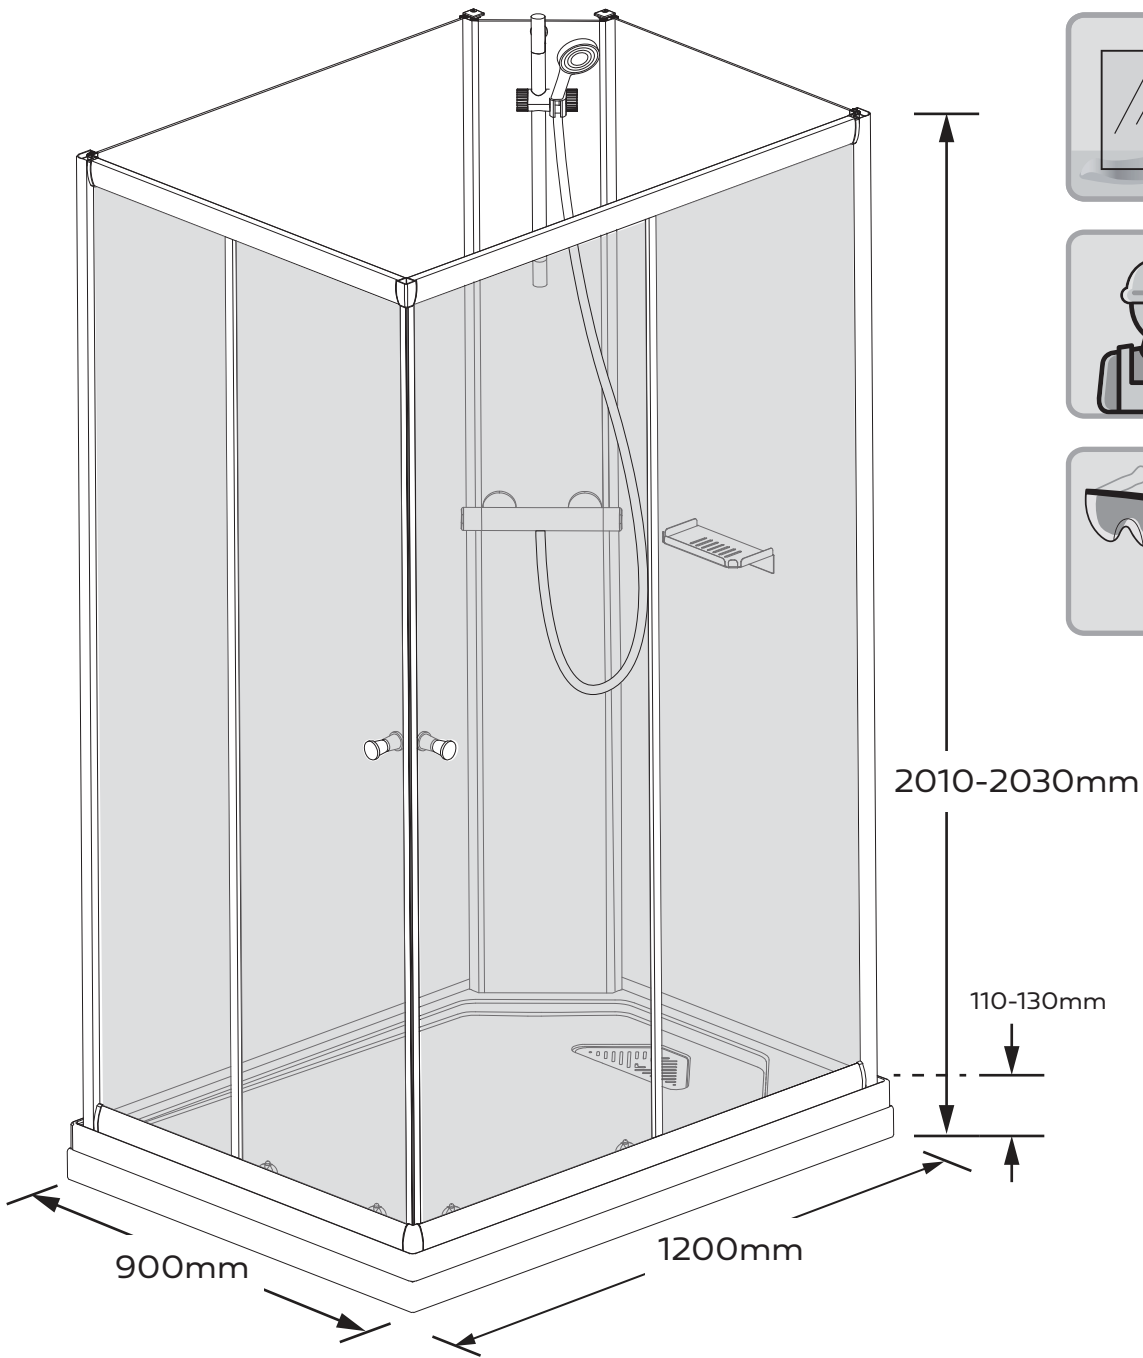





A

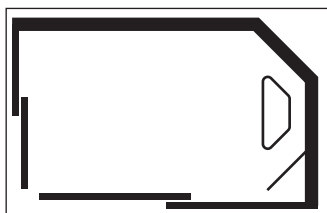

B

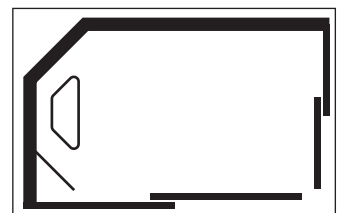

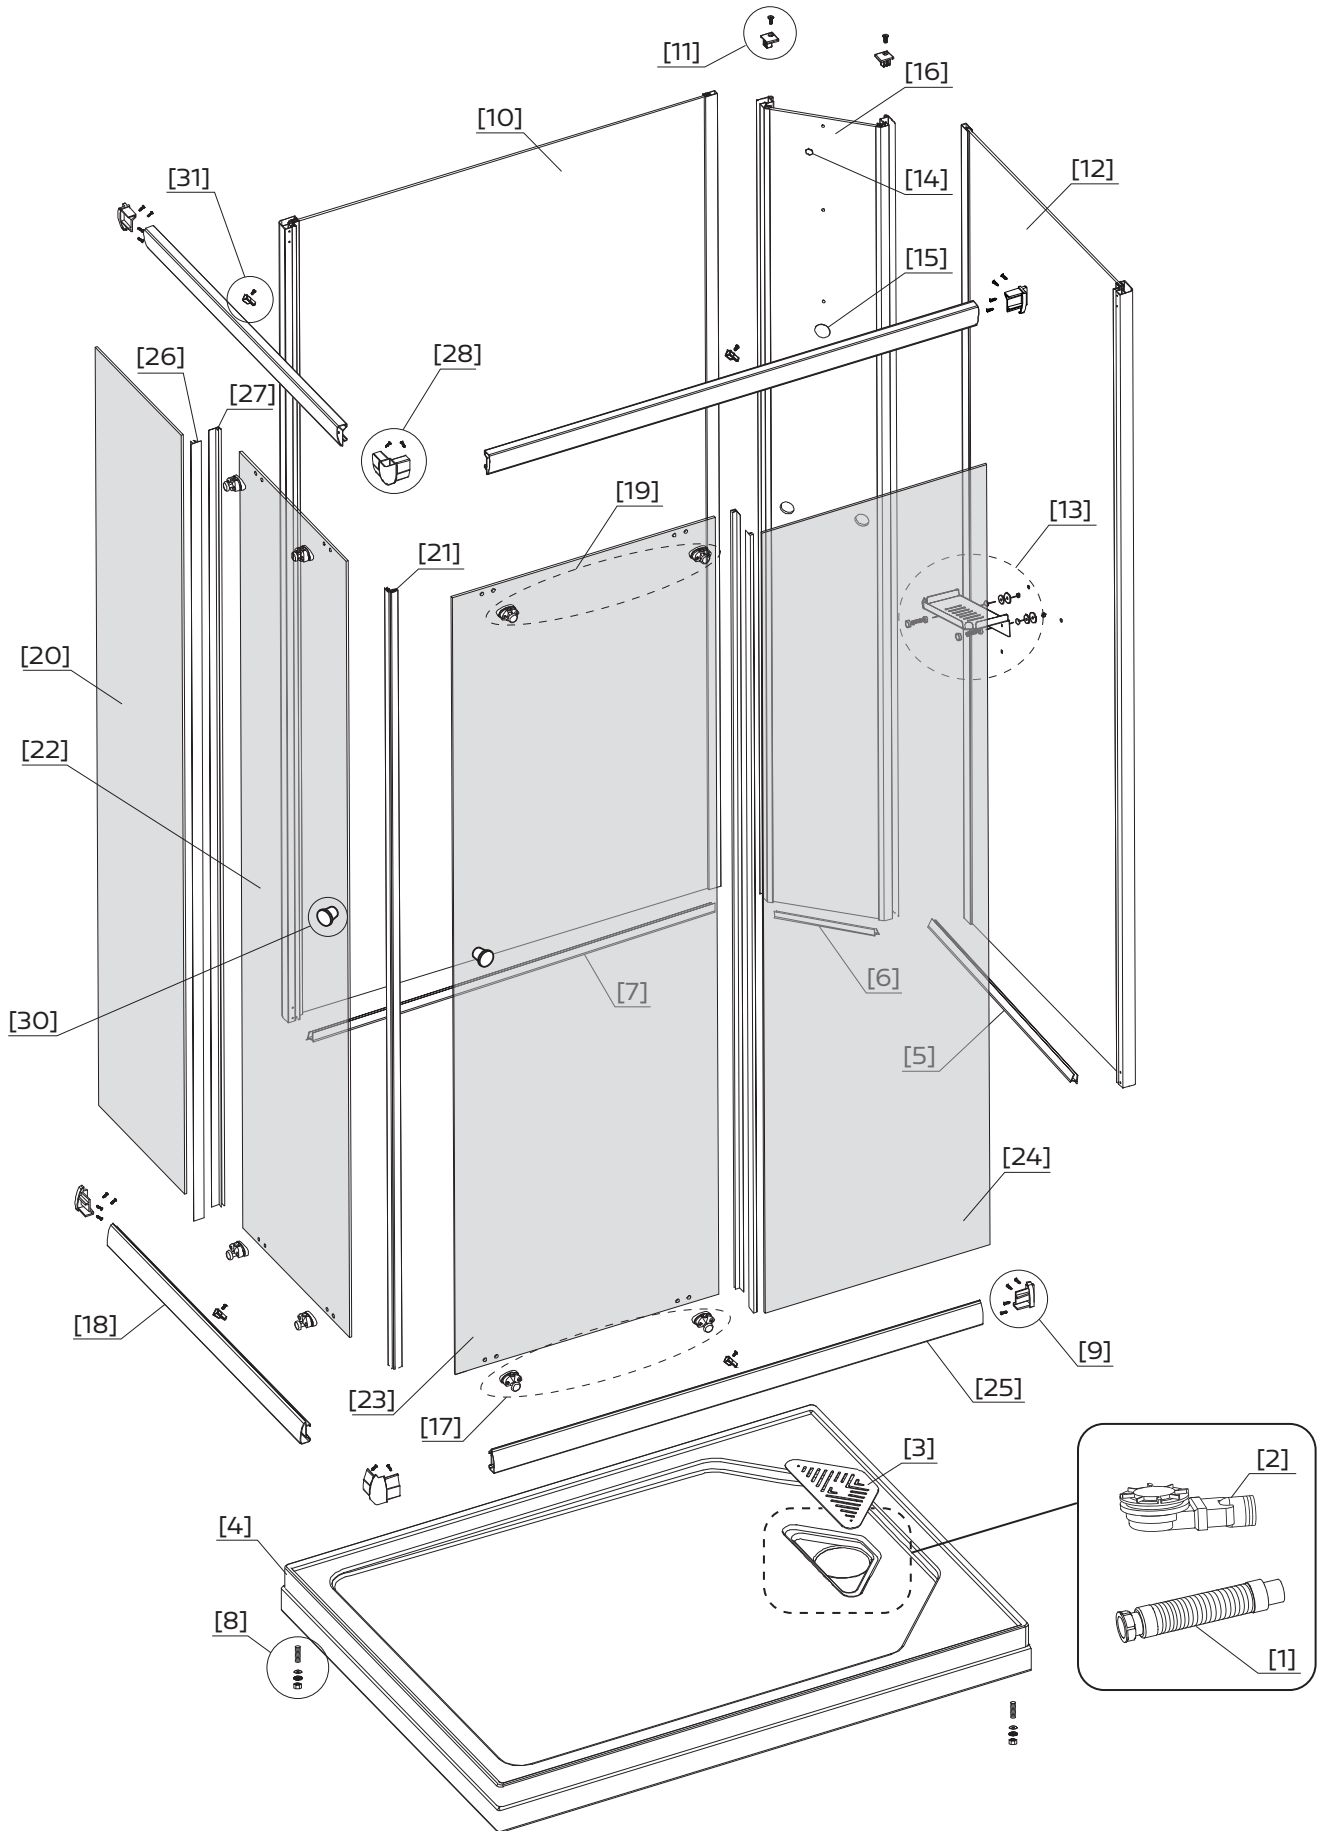


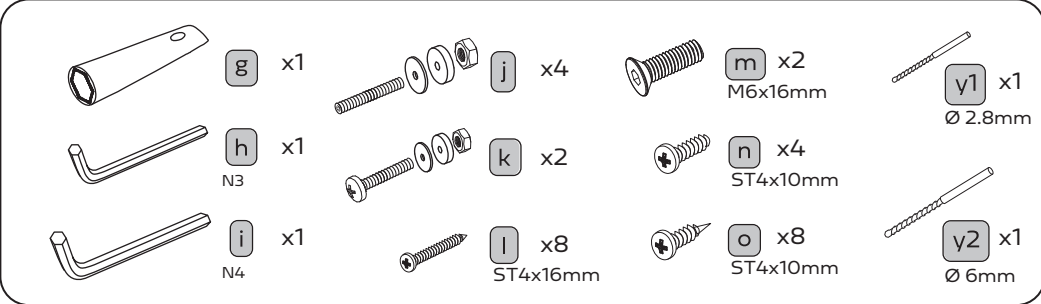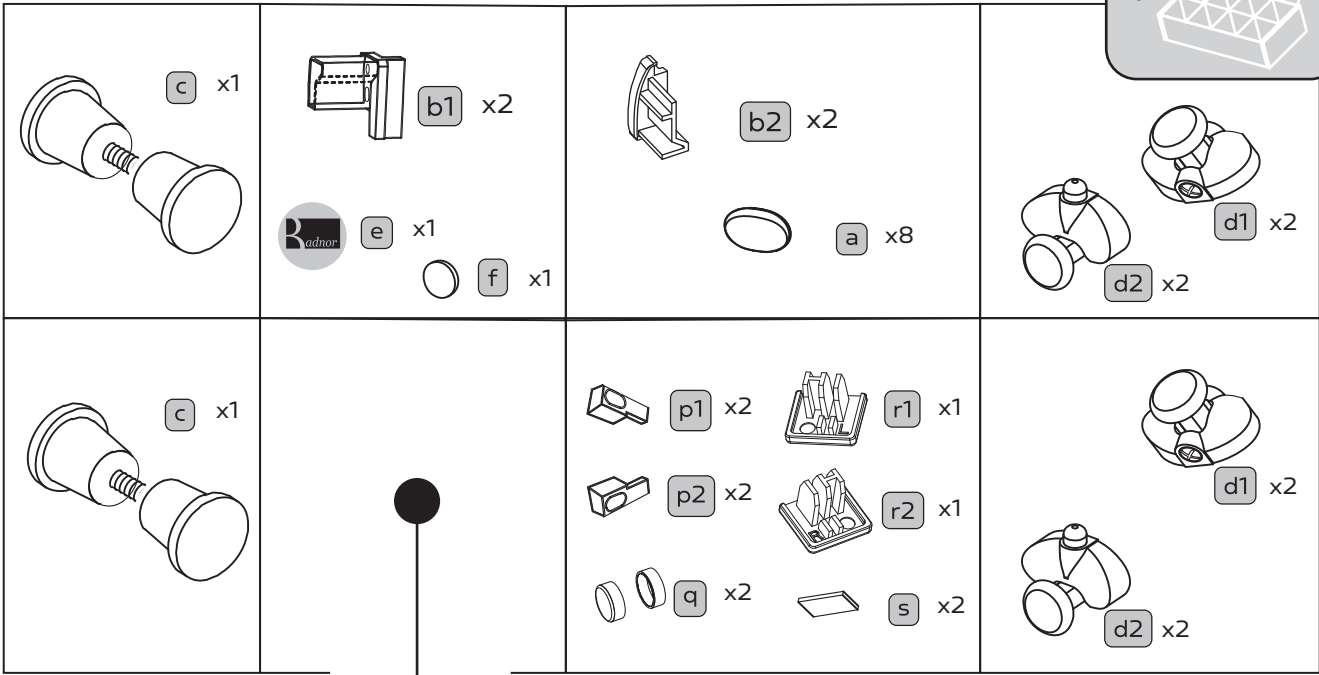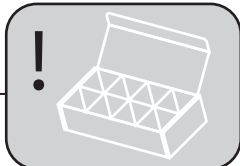


**v1** x2  
1861mm




**v2** x2  
1797mm

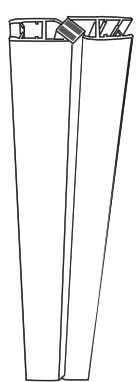

**w** x1  
1861mm




**x1** x1  
214mm



**x2** x1



Model 90x70 : 418mm  
 Model 100x80 : 518mm  
 Model 105x90 : 618mm  
 Model 120x90 : 618mm





**x3** x1

Model 90x70 : 618mm  
 Model 100x80 : 718mm  
 Model 105x90 : 768mm  
 Model 120x90 : 918mm


Not included , buy separately

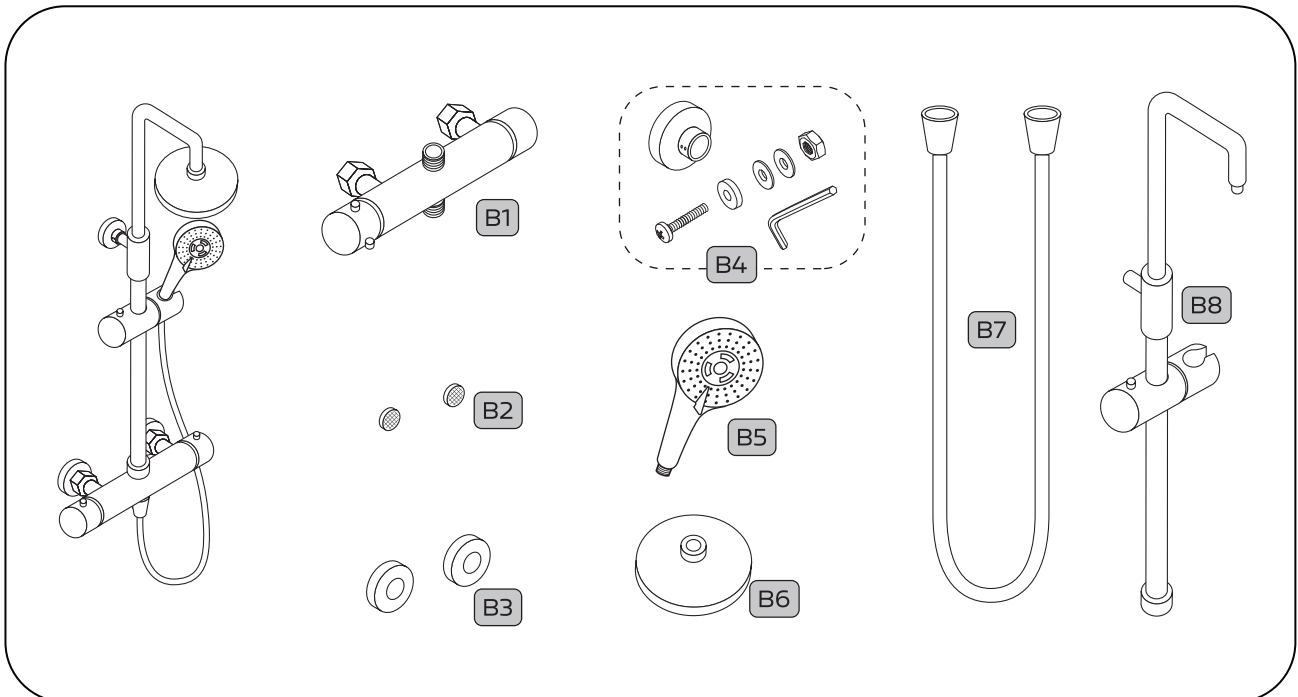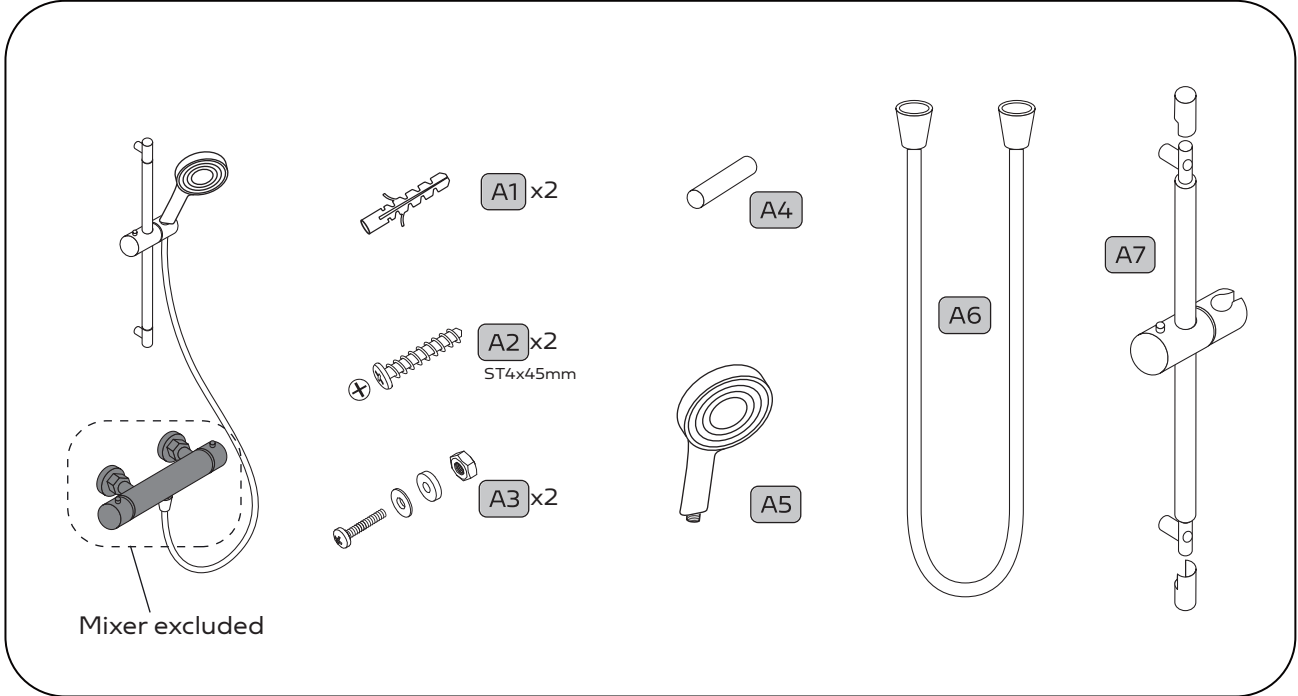

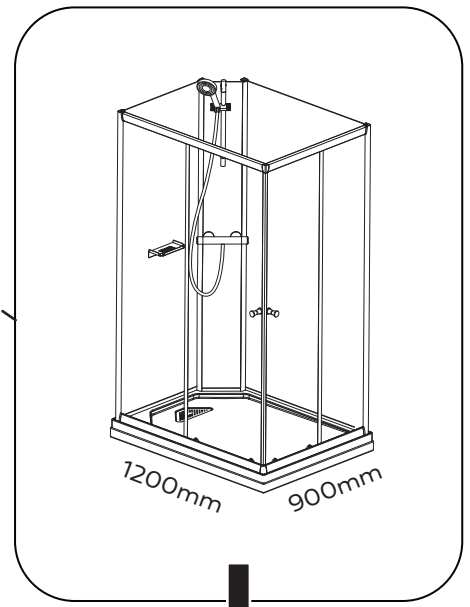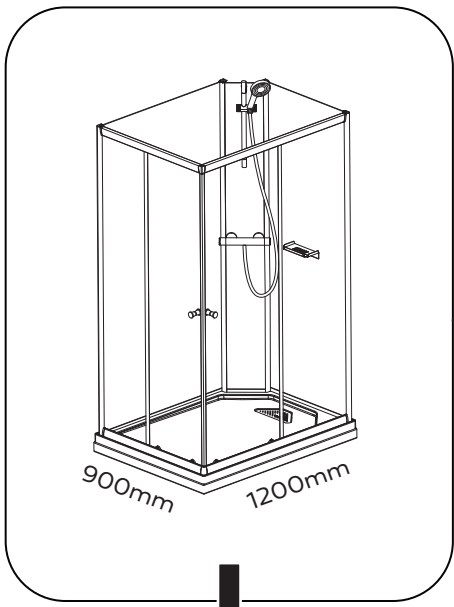







1A




**i** Follow Blue Drilling Marks  
Följ Blåa Bormärken

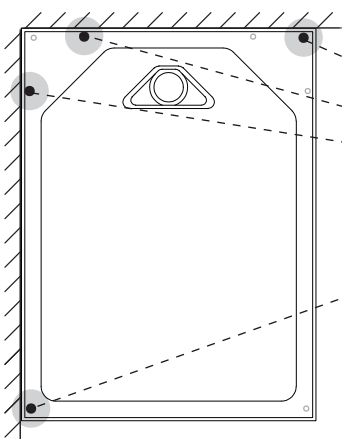


1B

**i** Follow Red Drilling Marks  
Följ Röda Bormärken

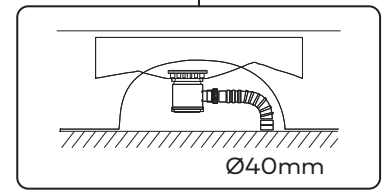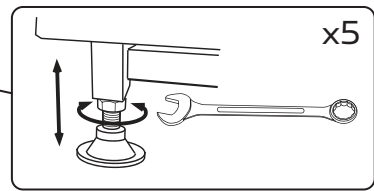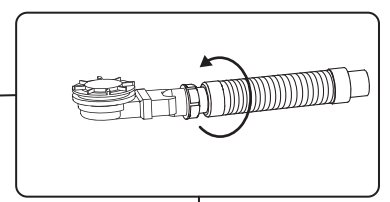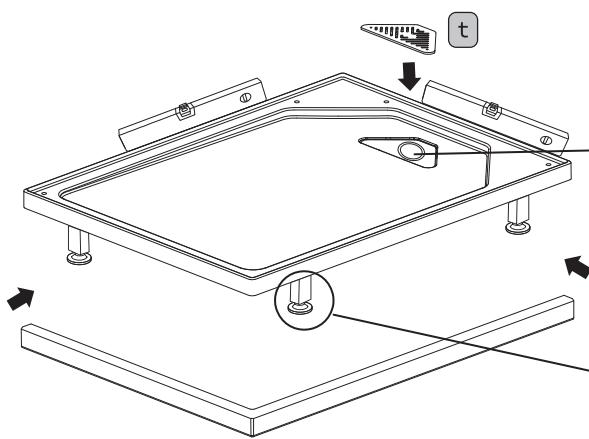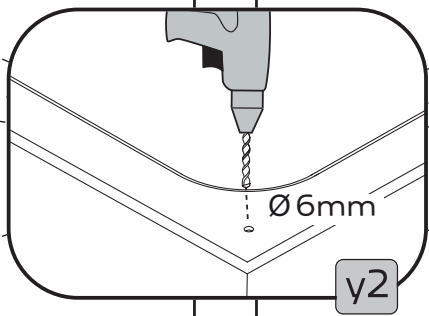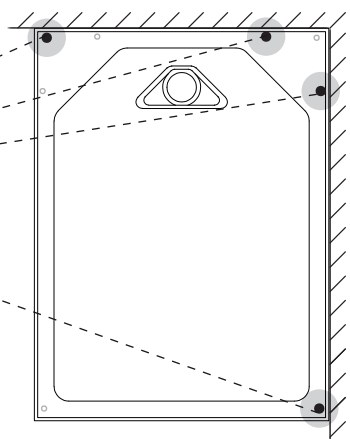


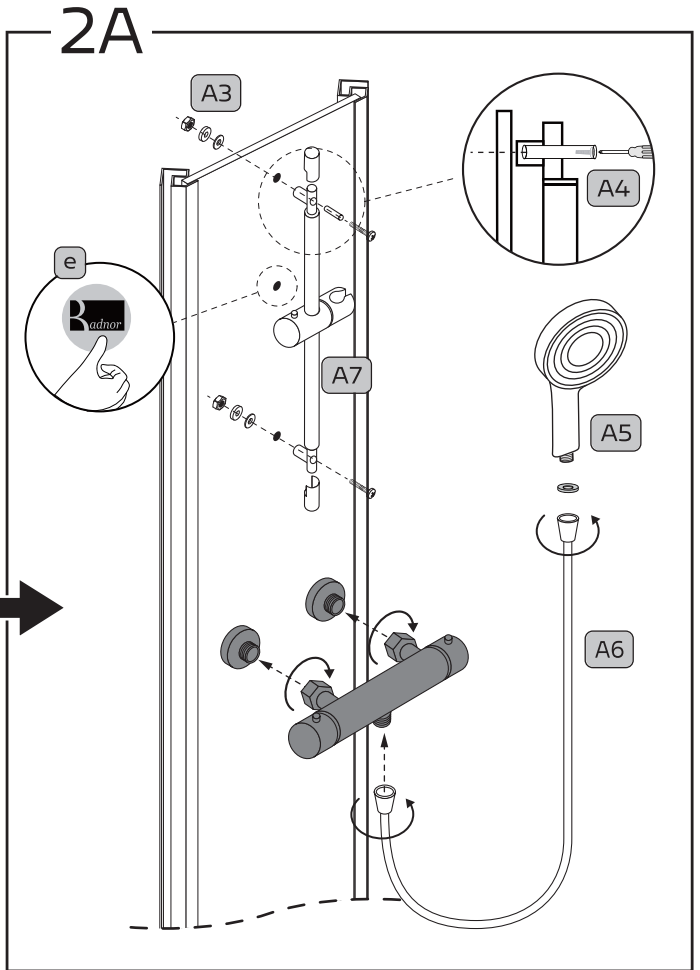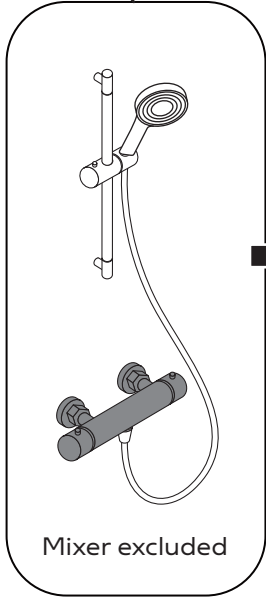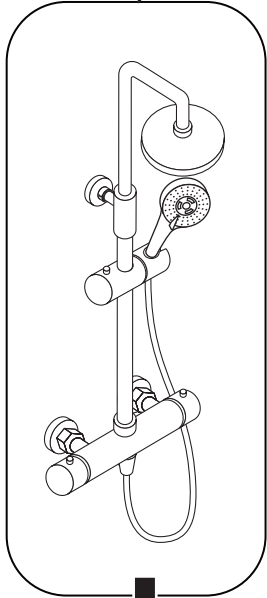


### 2B

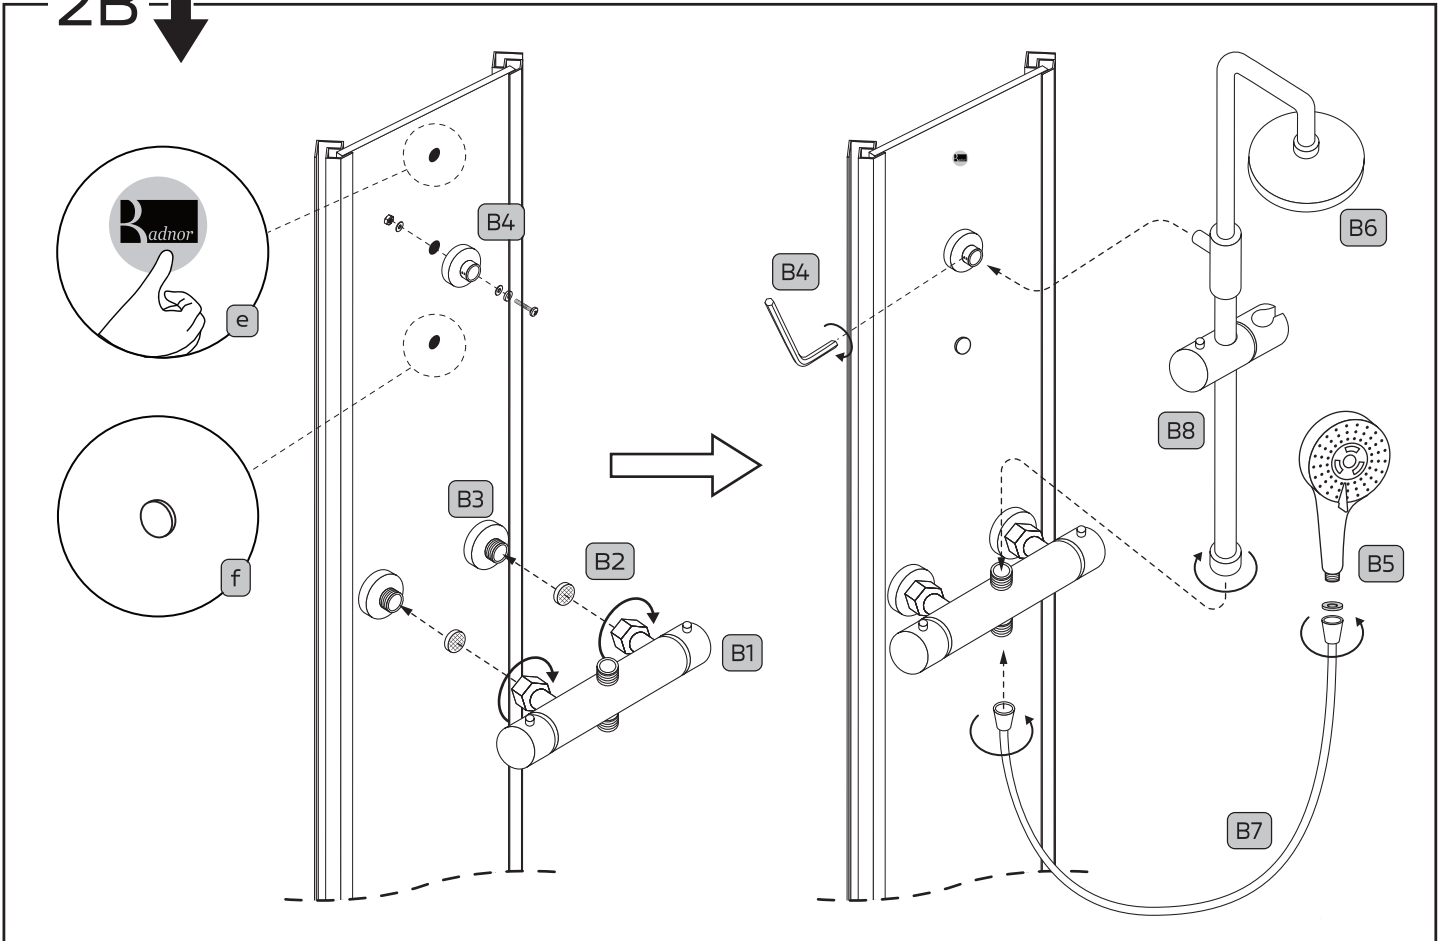

3

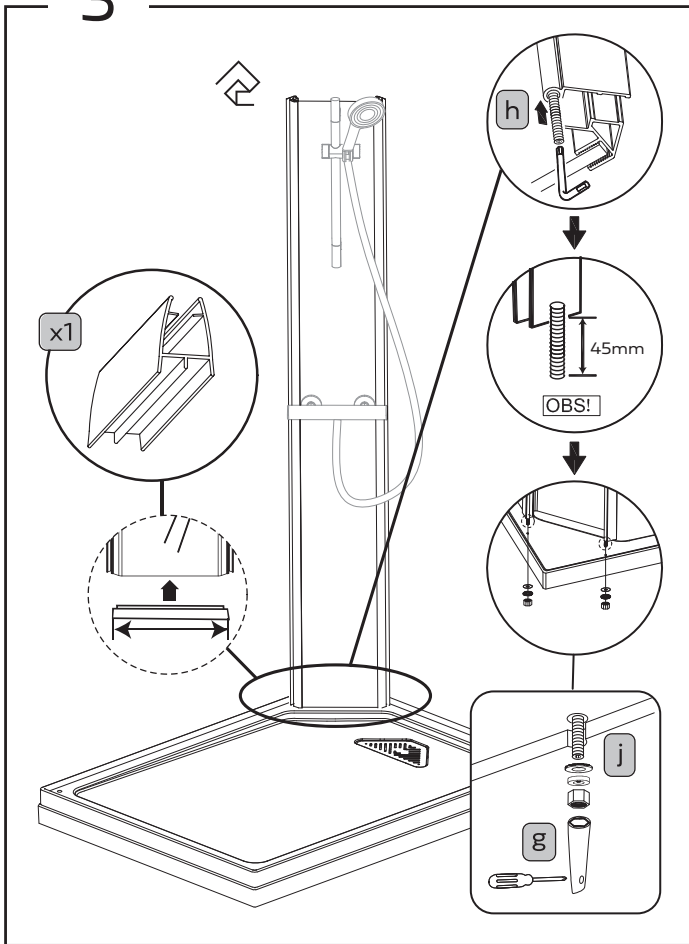


4

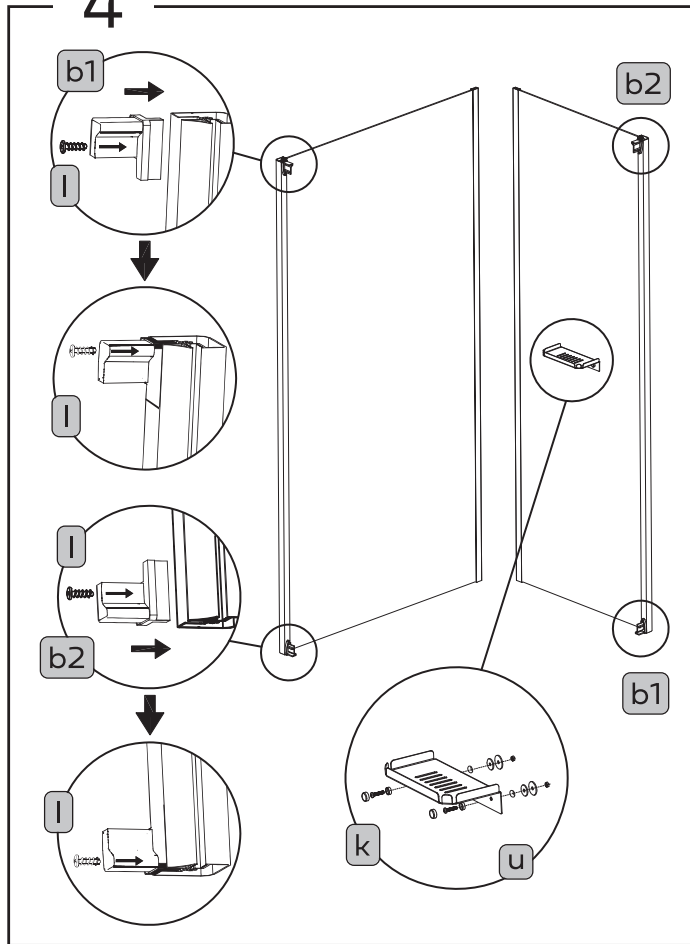


T1(16)


5

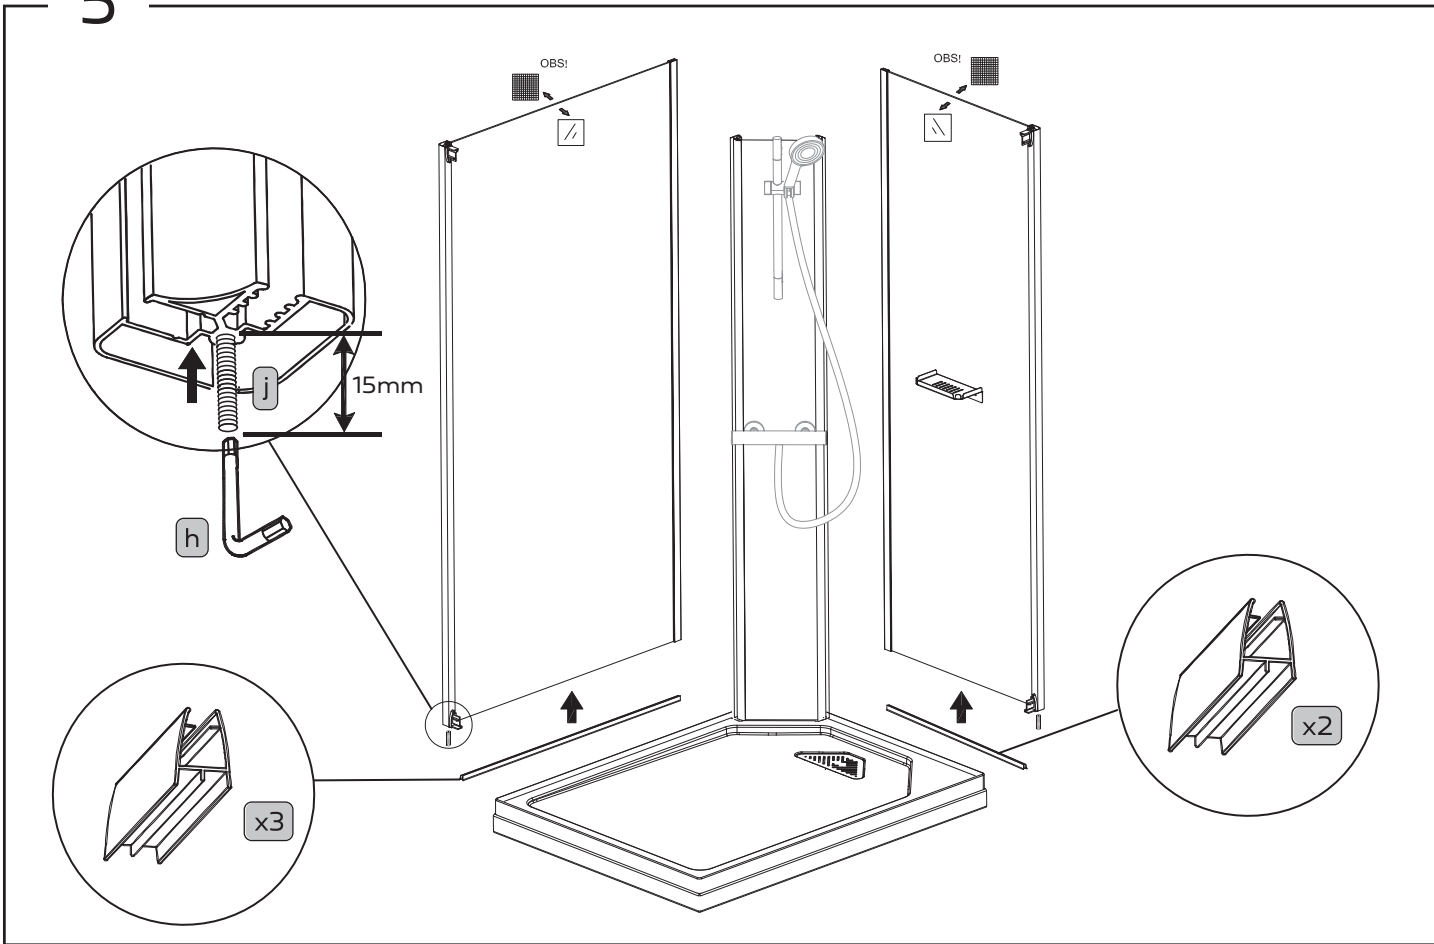





# 6

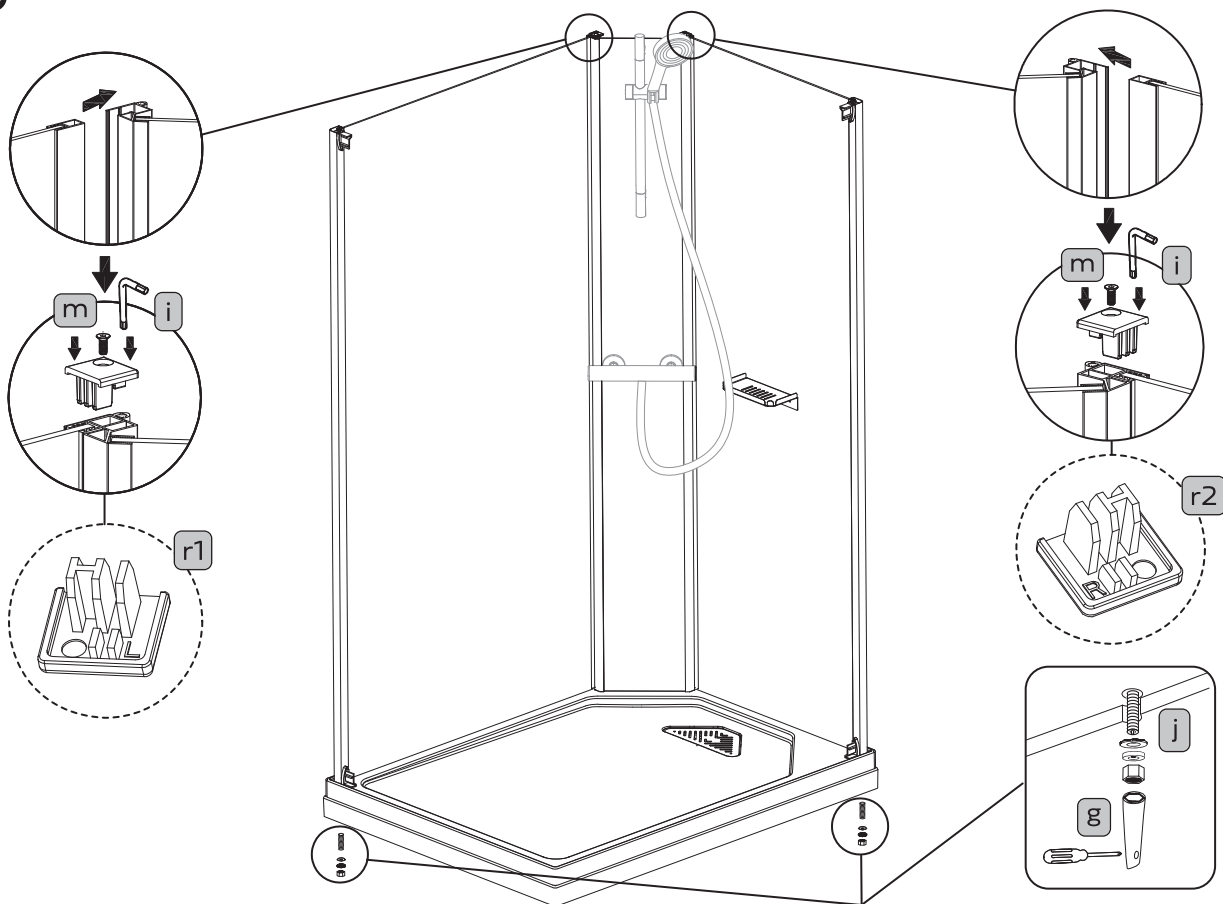


# 7

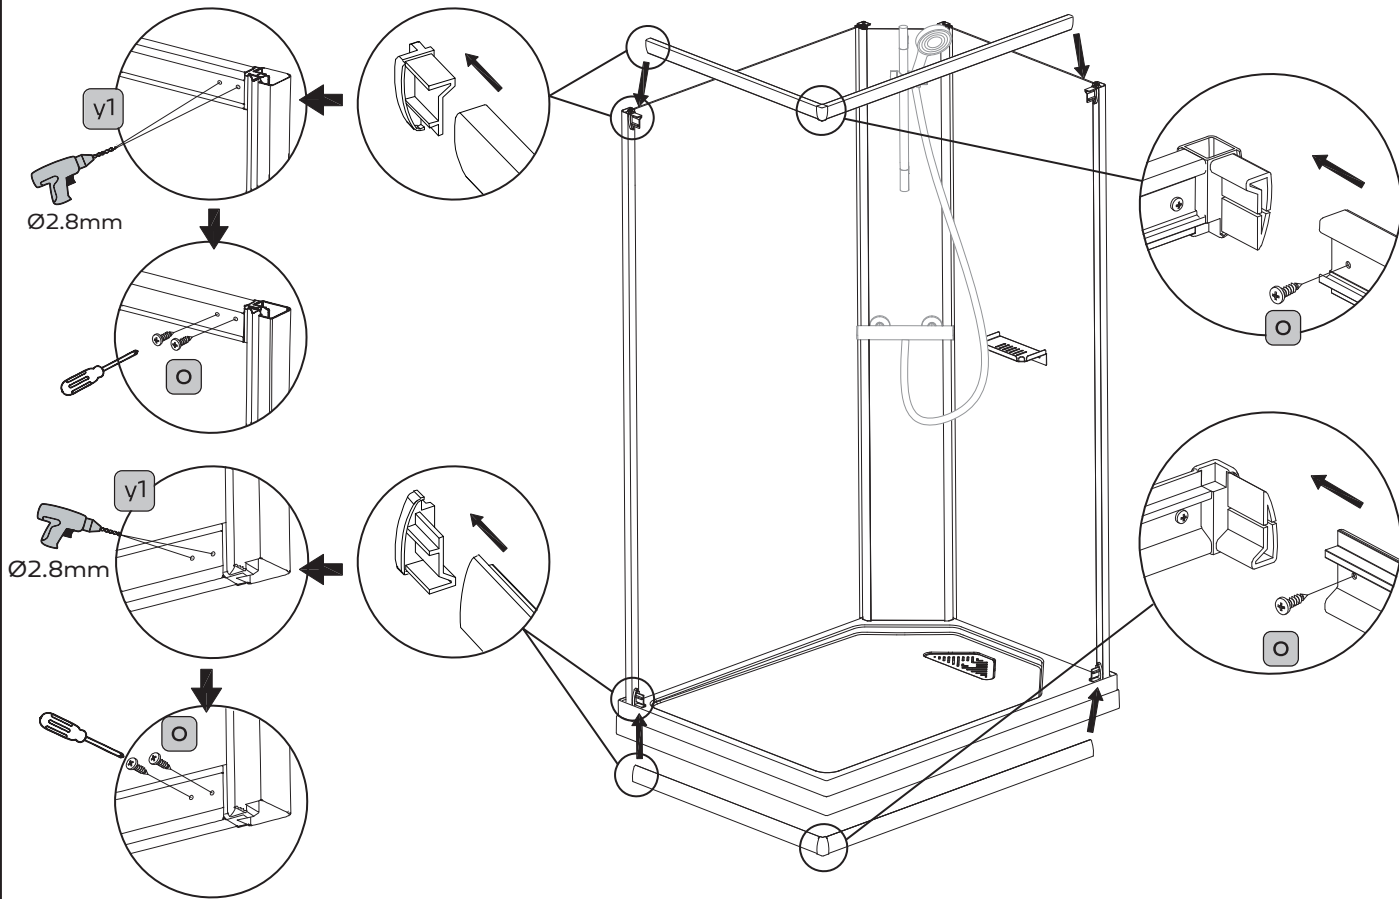

8

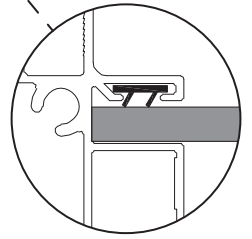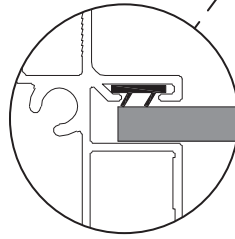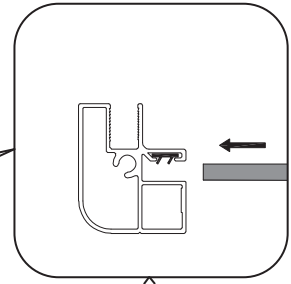
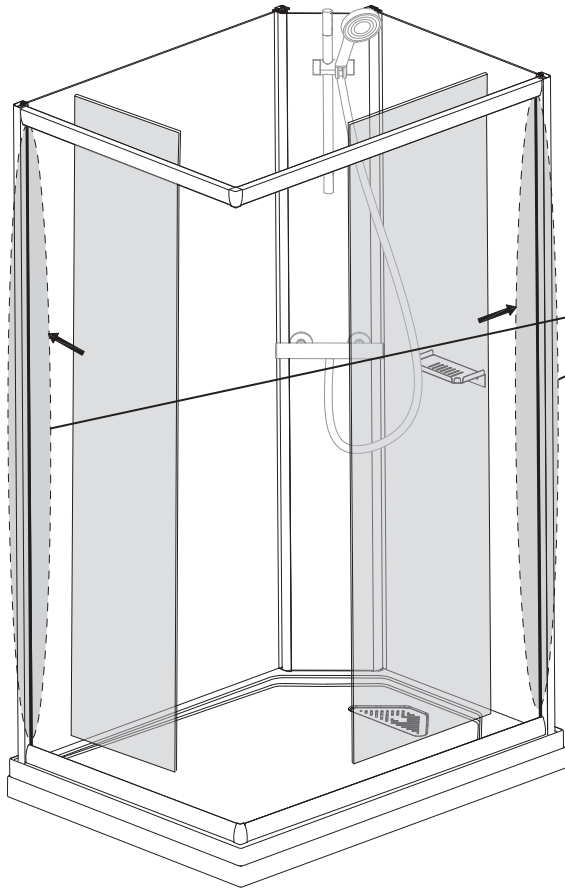


9

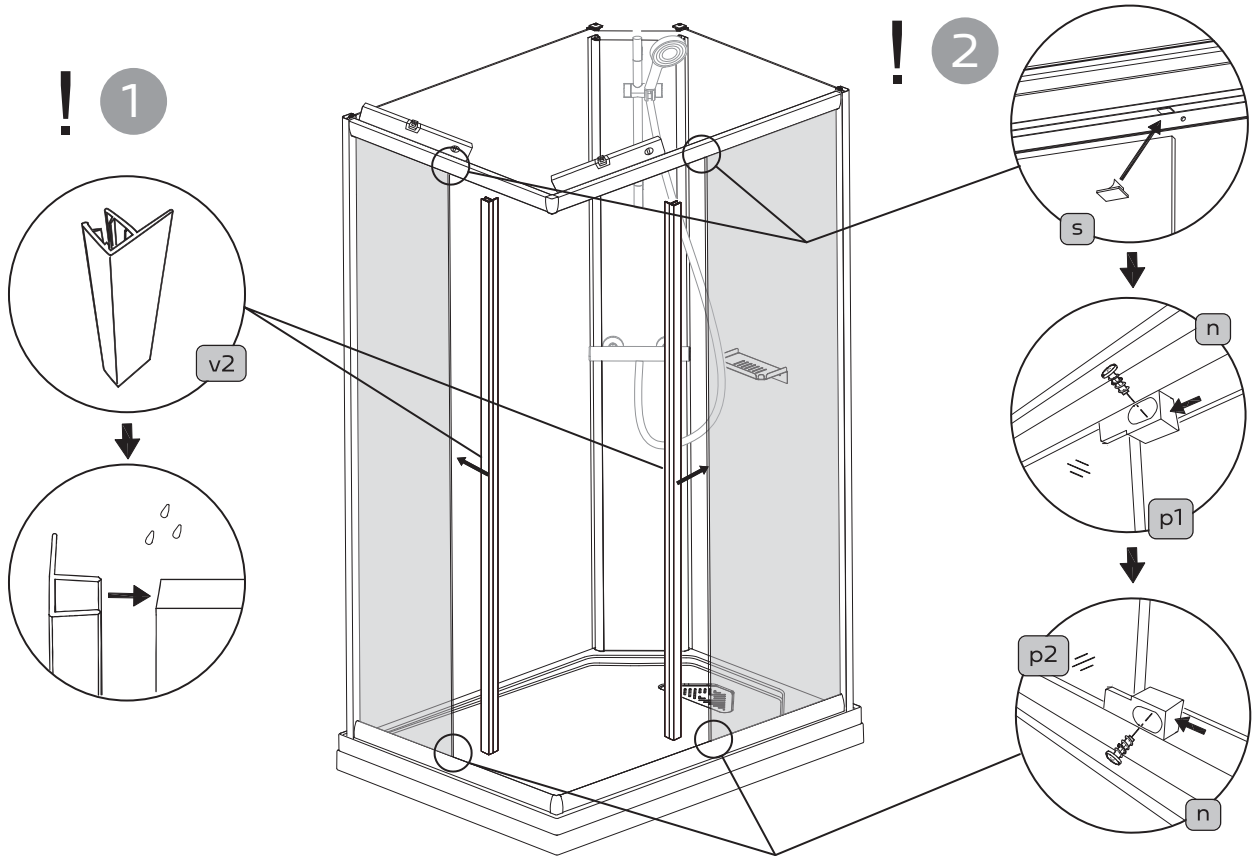




!


1

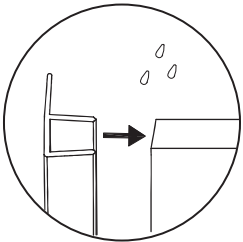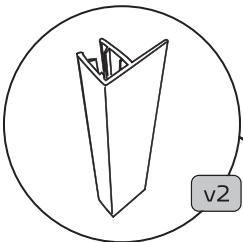


!

2

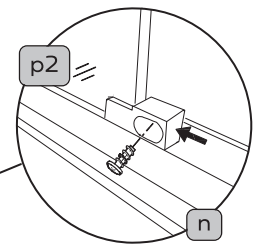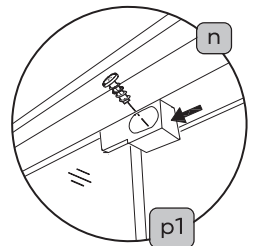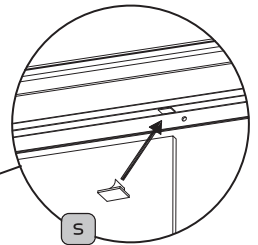

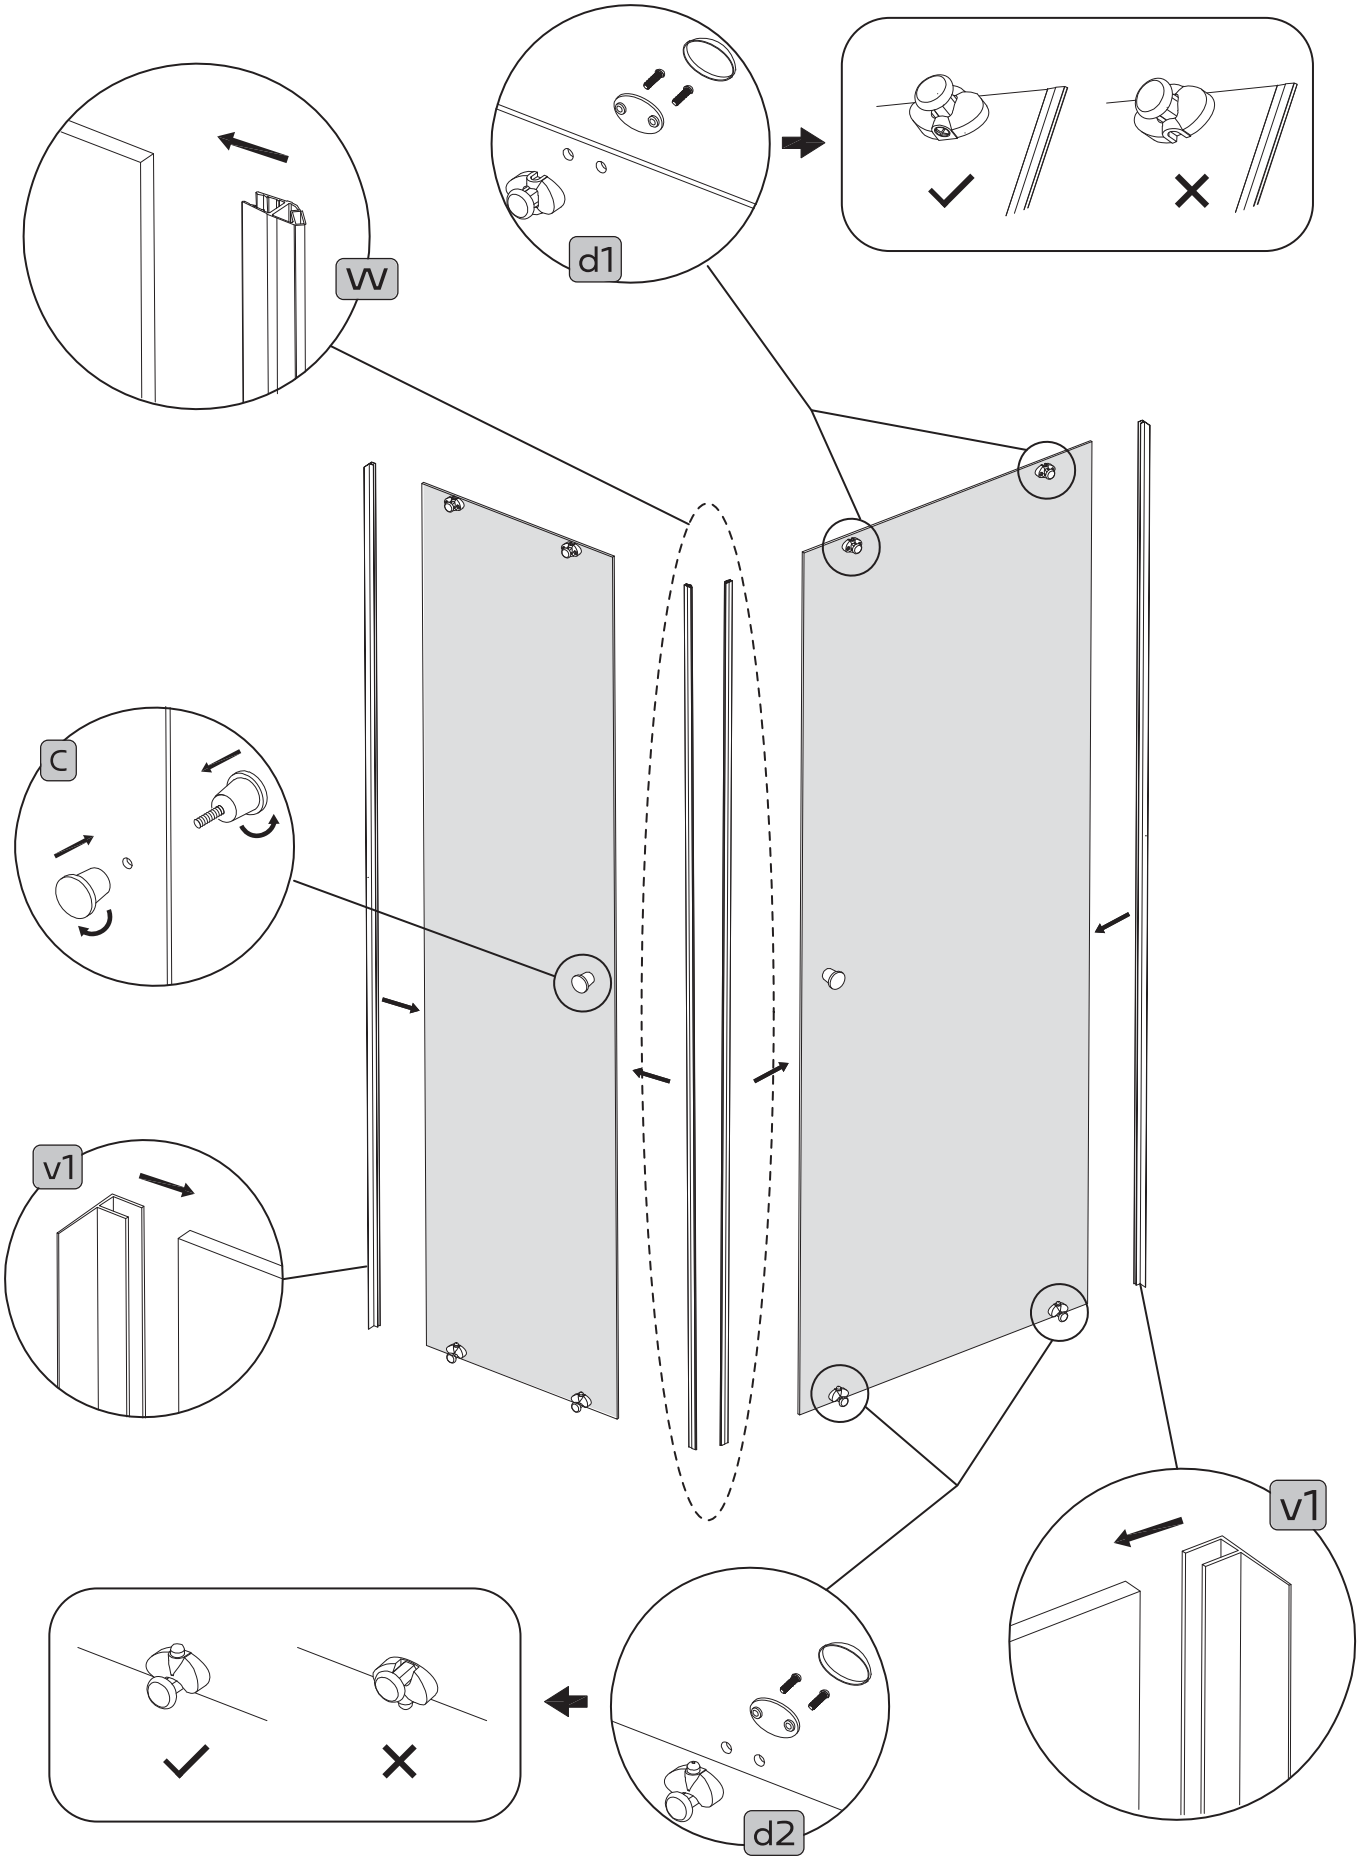

11

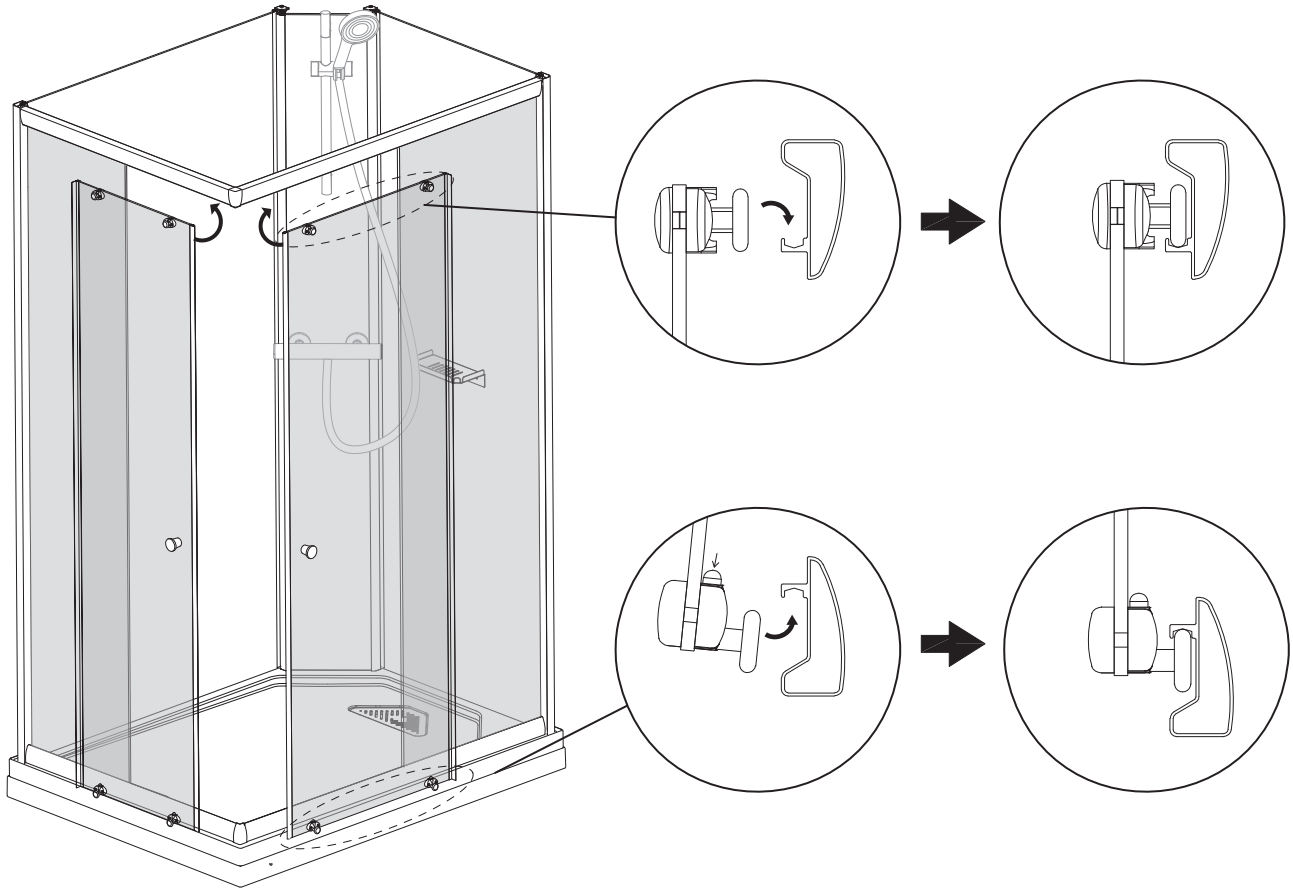

12

